


Styling parts that make your truck look great!

Mounting instruction for Door Wind Deflectors

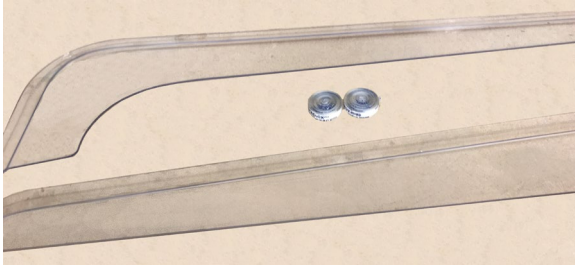

Content

- One pair of deflectors
- Two coils of transparent adhesive tape.

The product has a protection foil on one side, the outside. The foil must be removed before the adhesive tape is applied.



- Apply the adhesive tape on the outside of the deflector, see picture.



- Pull down the window.
- Secure that the window sealing is clean and free from dirt before mounting.
- Remove the protection foil on the adhesive tape.
- Mount the door wind deflector in the window doorframe against the window sealing.

- Pull up the window.
- Don't use the window until the adhesive tape has been hardened, normally after 24 to 48 hours, depending of ambient temperature.



Click to see on YouTube or scan QR-code

