

CONTENTS:

Pos	Name:	Art no:	Pcs
1	Sunvisor 30 cm for Scania NG Sunvisor 30 cm Custom 7 for Scania NG Sunvisor 35 cm for Scania NG Sunvisor 35 cm Custom 7 for Scania NG Sunvisor 35cm Custom 9 for Scania NG Sunvisor FLAT for Scania NG Sunvisor FLAT Custom 7 for Scania NG Sunvisor BOW for Scania NG Sunvisor BOW Custom 7 for Scania NG	10-0215 10-0216 10-0217 10-0218 10-0219 10-0220 10-0221 10-0222 10-0223	1
2	Mirror extender 140/170 mm	403/402	1
3	Installation kit for mirror extender	90-0013	1
4	Hexagon screw M8x25 mm	451	2
5	Spring washer M8	474	2
6	Spacer*	405	6/9


*Spacers are only included with the sunvisor Custom with a position light at the bottom of the sun visor.



IMPORTANT!

All installations should be done by experienced mechanics/vehicle electricians. In the event of your own modifications or making holes in the product, the warranty expires. Always follow the truck manufacturer's the truck manufacturer's bodywork instructions regarding drilling and wiring in the cab. The same applies to the dimensioning of cables and the connection of lighting.

TruckStyle Sweden AB does not take responsibility for any damage that occurs in the event of an incorrect installation. The installation instructions describe the installation of sunvisor on a left-hand drive vehicle.

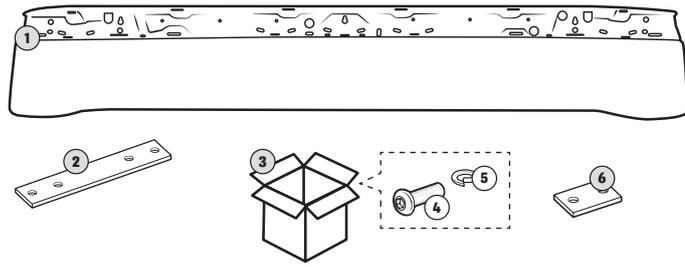


1. Start by removing the upper part (1) of the sunvisor by pushing in the upper part's lockings (2).



NOTE! Save the upper part to be reused for the new sunvisor.

1. Upper part
2. Locking

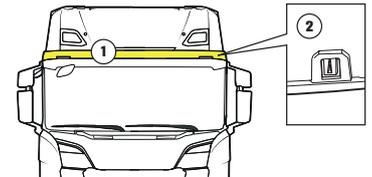


2. Disconnect the connector (3) between the cab and the front mirror (1) and remove the front mirror from the cab by removing 2 screws (2). Disconnect any contact piece for position lights between the cab and the sun visor. Remove position lights (4) with associated cabling from the sunvisor.




NOTE! If mounted, save position lights and associated wiring that will be reused for the new sunvisor.

1. Front mirror
2. Screw M8
3. Front mirror cable & connector
4. Positions light with connector

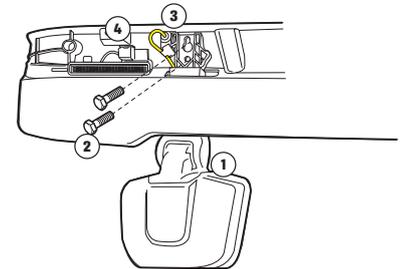


3. Remove the sunvisor from the cab by removing remaining 4 screws (1).

1. Screw M8

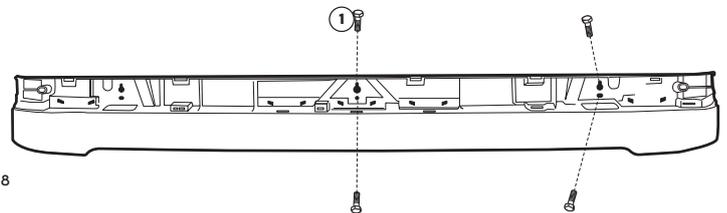

4. Place the mirror extender (1) on the front mirror with 2 screws (2) and spring washers (3)

1. Mirror extender
2. Hexagon screw M8x25
3. Spring washer M8

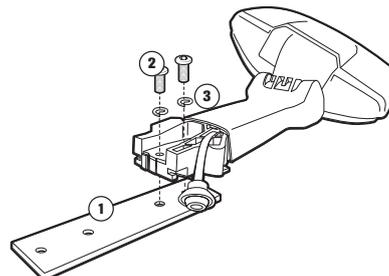

5. If equipped with position lights, fasten wiring to the position lights i new sun visor and use the pre-drilled holes for cable ties.


6. Applies to sun protection Standard without position light at the bottom

Fit the sunvisor and the front mirror with the mirror extension with 6 press-in threaded screws (1). The screws must be adjusted in length so that the screws' thread engagement in the cab's weld nuts is the same as on the original sunvisor.

Applies to sun protection Standard with position light at the bottom

The sunshade and the front mirror must be put there as well evenly distributed number of spacers* (3) between sun protection and the cab's three attachment points.

Put the sun visor and the front mirror with it the mirror extender with 6 press-in threaded bolts (1). The screws must be adjusted in length according to number spacers, so that the thread engagement of the screws in the cab weld nuts will be the same as it is on the original sun visor.

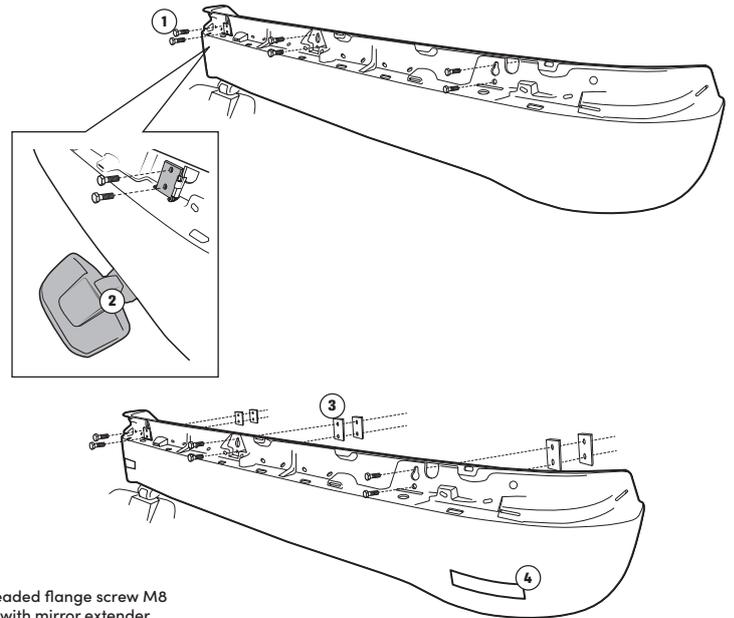


1. Press-in threaded flange screw M8
2. Front mirror with mirror extender
3. Spacer
4. Position light (only sunvisor Custom)

*For sunvisors with 2 position lights (4) at the bottom, 6 spacers must be used.
 For sunvisors with 4 position lights at the bottom, 9 spacers must be used.

! **IMPORTANT!** If other accessories (for example light boxes or light arcs) are to be mounted, but only use two of the sunvisor's attachment points, an equally thick spacer must be used in the positions not affected by the accessories. Be sure to make the distance 80x50 mm x thickness of the accessory. The reason is to distribute the power so that there is no tension in the sunvisor. No gaps are allowed!

! **IMPORTANT!** Tighten the screws by starting with the 2 middle screws and finally tightening the 4 outer ones.

7. Connect the front mirror's connector (1) to the cab's connector. If the sunvisor is equipped with position lights, connect the wiring harness to the cab. Fit the position lights (2) and connect the wiring harness to the position light connector (3).

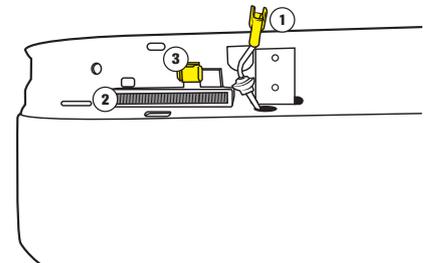

1. Front mirror connector
2. Position light
3. Position light connector


! **IMPORTANT!** All cable entries in the cab must be sealed so that water cannot enter the cab.

8. When the electrical connection between the vehicle and the LED ramps is performed (performed by electrician). Turn on the LED ramps and adjust the light pattern, finally tighten all the screws, and nuts.

Check the function of the front mirror and same for the position lights if equipped.

9. Put back the original upper part on the new sunvisor (1).

1. Upper part

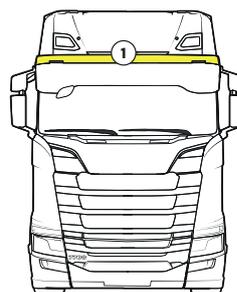

Use mobile camera to get Swedish Instruction

